


Operating mode

Zelup Mobile Station

1. Turning on

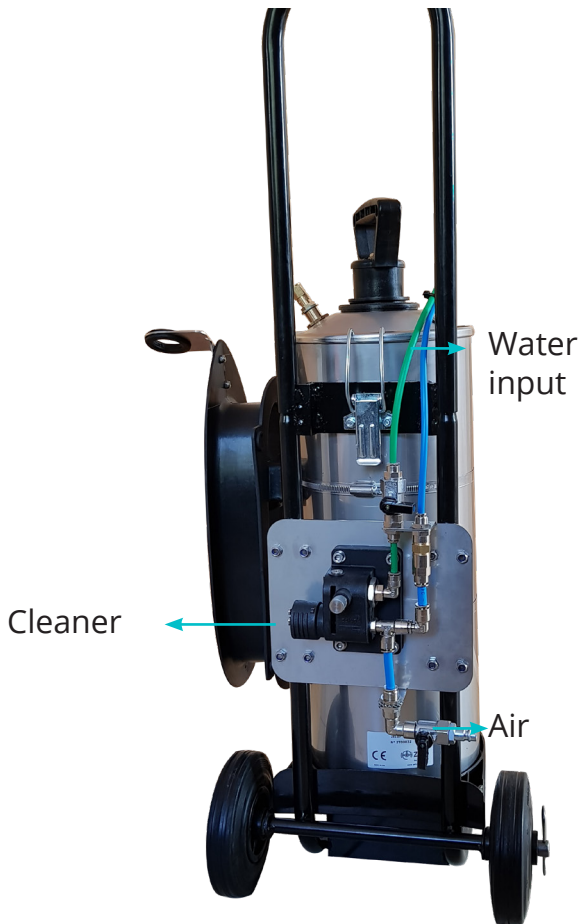

- Close the needle valves (air and water)
- Connect the gun hose to the stand
- Connect the compressed air to the air intake 1/4 F" BSP
- Fill the container
- Close the container (do not force)
- Start the compressor (Air pressure 5 to 10 bar: We recommend 7 bars)
- Opening the air valve outlet compressor
- Opening the «air» needle valve: continuously pressurizing the 12-liter container under 2 bars
- Opening of the «water» needle valve according to the desired water flow (½ turn ≈ max flow)
- Pressing the trigger (in a halfway position: only air, or keeping pressed the trigger position)


 Wash



 Brush



 Dry

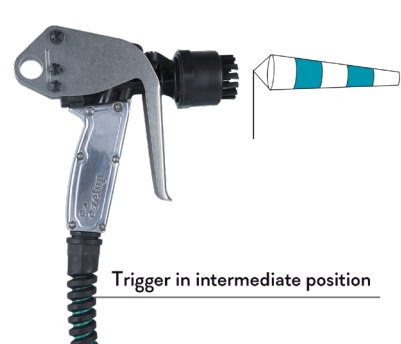

Mode opératoire

Zelup Station Mobile

2. Stop

- Air valve closing at the compressor outlet
- Gently lift the valve to put the container at P atm
- Be careful to keep the valve lifted until the outgoing airflow stops
- Pressing down the trigger to check for lack of air and pressurized water.
- Closing valve needle water
- Manually open the container
- If emptying the container, remove the compressed air hose, to facilitate the overturning of the container
- If necessary, disconnect the gun hose from the stand.

For more informations, visit www.zelup.com or contact us :
+33 (0)9 53 72 61 53 office@zelup.com